

## Getting Started

### Installing/Replacing the Batteries

This unit requires 3 AA batteries (not included)

**Note:** Batteries should always be installed by an adult.

When the Low Battery icon appears on the lower right of the display, it's time to replace the batteries.

- 1 Use a Phillips screwdriver to open the battery compartment door located on the back of the unit.
- 2 Insert 3 AA batteries into the clock with + and - terminals as indicated in the compartment.
- 3 Replace the compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten the screw.

### For the Best Possible Performance

- We recommend the use of alkaline batteries for longer life.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Batteries are to be inserted with correct polarity.
- Remove exhausted batteries from the unit.
- Do not attempt to recharge non-rechargeable batteries.
- Remove rechargeable batteries from the unit before charging.
- The supply terminals are not to be short-circuited.
- Batteries should be removed if the item will not be used for an extended period of time, such as a month or longer, to prevent battery leakage or damage.
- Rechargeable batteries should only be charged under adult supervision.
- Only batteries of the same or equivalent type as recommended are to be used.

## Setting the Time

1. Press and hold the **Time Set Button** until the clock display begins to flash and a beep sounds.
2. Scroll to your desired time using the **Forward and Reverse Buttons**. Make sure to set the correct AM/PM time. The PM indicator appears at the bottom left of the display; there is no AM indicator.
3. Once you have selected a time, press the **Time Set Button** again. Two beeps will sound to confirm time setting.

## Setting & Using the Alarm

1. Find the **Alarm ON/OFF Switch** on the back of the unit and slide it to 'ON'. The alarm indicator will appear on the upper left of the display.
2. Press and hold the **Alarm Set Button** until the clock display and alarm indicator begin to flash and a beep sounds.

## Setting & Using the Alarm

3. Scroll to your desired alarm time using the **Forward and Reverse Buttons**. Make sure to set the correct AM/PM alarm time. The PM indicator appears at the bottom left of the display; there is no AM indicator.
4. Once you have selected a time, press the **Alarm Set Button** again. Two beeps will sound to confirm alarm setting.
5. The alarm sounds for 15 minutes. When the alarm is sounding, press the **Alarm Reset Button** to reset the alarm to come on the next day at the same time. To disarm the alarm, slide the **Alarm ON/OFF Switch** on the back of the unit to 'OFF'. The alarm indicator will vanish from the display.

## Snooze/Night Light Button

### Alarm/Snooze Function:

When the alarm is sounding, press the **Snooze/Night Light Button** to activate a 7 minute snooze cycle before the alarm sounds again. Snooze can be pressed several times during the 1 hour alarm cycle.

### Night Light Function:

The Night Light can be activated before you go to sleep. When the alarm is **not** sounding (or the snooze feature is inactive) press the **Snooze/Night Light Button** to cycle through 5, 10, and 15 minute or OFF night light periods. Select the desired time and the unit will turn off the light automatically. Selecting OFF will disable the Night Light function.

## Troubleshooting

If the clock does not work, this may indicate that the batteries are weak. Insert 3 new AA batteries into the unit.

**If problems persist, DO NOT ATTEMPT TO REPAIR THE UNIT. See the Warranty for factory services.**

## Questions or Comments

 
- For questions or comments regarding this or other KIDdesigns products, please call our toll-free number: **1-888-TOP-TOYS**. Also visit our website: **www.kiddesigns.com**

**If problems persist, please do not attempt to repair unit; see warranty for factory service.**

## Maintenance


It is important to keep the alarm clock as dry and clean as possible. You may clean the cabinet with a cloth or sponge moistened with mild soap and water. Do not attempt to use strong cleansers or solvents, as they may cause damage.

Alarm ON/OFF Switch /  
Interruptor ON/OFF de la Alarma para activar o desactivarla /  
Commutateur d'alarme marche/arrêt

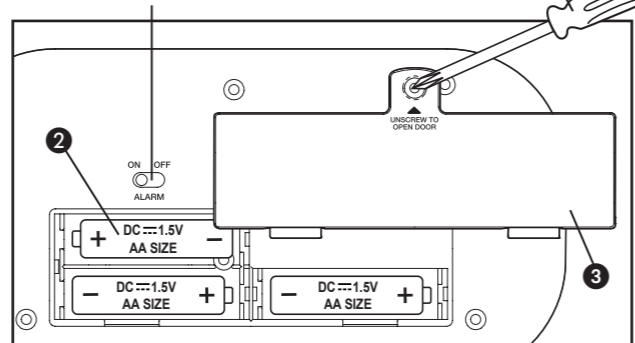

### DISPLAY / PANTALLA / ECRAN

 
Alarm Indicator / Indicador de la Alarma /  
Indicateur d'alarme

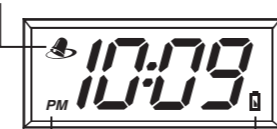

PM Indicator /  
Indicador PM /  
Indicateur PM

Low Battery Indicator /  
Indicador Bateria Baja /  
Indicateur de niveau de pile bas

 Alarm ON/OFF Switch /  
Interruptor ON/OFF de  
la Alarma para activar  
o desactivarla /  
Commutateur d'alarme  
marche/arrêt

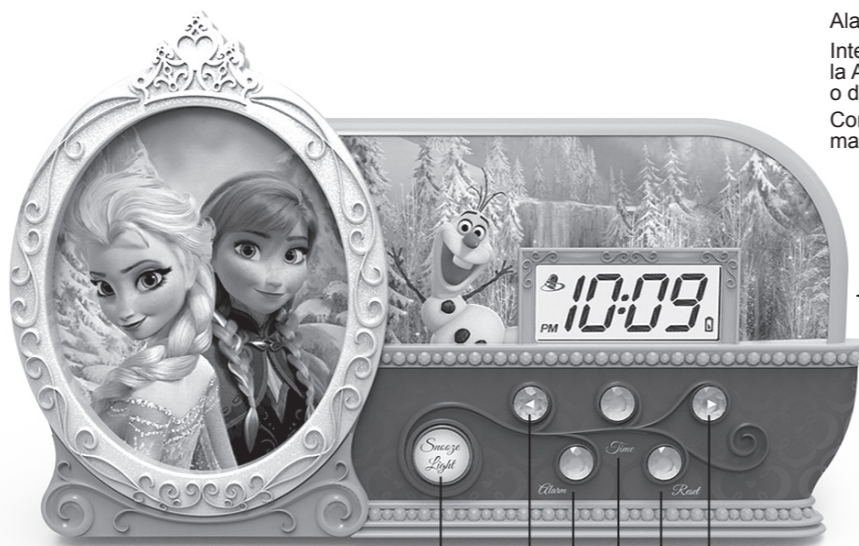

Snooze/Night Light Button /  
Botón para repetir la Alarma/activar  
Luz Luminiscente /  
Touche Rappel d'alarme/Veilleuse

Reverse Button / Retroceso / Retour

Alarm Set Button / Botón para configurar la Alarma /  
Touche Régler l'alarme

Forward Button /  
Botones de avance /  
Boutons Avance

Alarm Reset Button /  
Botón para volver a configurar  
la Alarma /  
Touche réinitialiser l'alarme /

Time Set Button /  
Botón para configurar la Hora /  
Touche Régler l'heure

## FCC Information

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAN ICES-3 (B)/NMB-3(B)

## Limited One-Year Warranty

KIDdesigns, a division of SDI Technologies Inc. (hereafter referred to as SDI), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of one (1) year from the date of original purchase.

Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, SDI will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center authorized by SDI Customer Service. The product must include proof of purchase, including date of purchase. An out-of-warranty fee for service will be charged for units that are received without proof of purchase.

Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered. If service is still required:

1. Call SDI Customer Service at 1-888-TOP-TOYS (1-888-867-8697) for Return Authorization and for the address of the Factory Service Center.
2. Remove the batteries (if applicable) and pack the unit in a well padded, heavy corrugated box. SDI is not responsible for damage that occurs during shipping to the Factory Service Center.
3. Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase, if within the warranty period. Also include your name and address information, a brief description for why the unit is being returned, and the return authorization number. No unit can be processed without a return authorization number.
4. Write the return authorization number on the side of the shipping package and send the unit prepaid and insured to the Factory Service Center address authorized by SDI Customer Service.

### Disclaimer of Warranty

**NOTE:** This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will SDI or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Your acknowledgment and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your SDI product.

© 2014 SDI Technologies, Inc. All Rights Reserved.  
Questions? Visit [www.kiddesigns.com](http://www.kiddesigns.com)  
or call 1-888-TOP-TOYS

© Disney  
Visit [Disney.com](http://Disney.com)  
Distributed by KIDdesigns, Inc. Rahway, NJ 07065-5024  
eKids is a wholly owned subsidiary of KidDesigns, Inc.,  
1299 Main Street Rahway NJ 07065

# Disney FROZEN NIGHT GLOW ALARM CLOCK/ RELOJ DESPERTADOR LUMINISCENTE/ RÉVEIL À LUMINESCENCE NOCTURNE

Model/Modelo/Modèle: FR-346.2



### Important Message to Customers

Thank you for purchasing one of Disney's many top-quality electronic products. We would appreciate it if you take a few moments to read through these instructions. This will help you explain to the child the safe and proper way to use this toy, and to help give it the long-lasting life that Disney products are designed for.

### Mensaje importante para los clientes

Gracias por comprar uno de los productos electrónicos de calidad superior Disney. Aprenderíamos que se tomara unos momentos para leer completamente estas instrucciones. Esto le ayudará a explicarles a los niños la forma segura y apropiada de usar este juguete para que tenga la vida útil prolongada para la que están diseñados los productos Disney.

### Message important aux clients

Merci pour votre achat d'un des nombreux produits de qualité Disney. Nous vous conseillons de prendre quelques minutes pour lire ces instructions. Elles vous indiquent comment expliquer à votre enfant la façon d'utiliser correctement et sans danger cet appareil et comment lui donner la plus longue vie possible que tous nos produits vous offrent.

